

D I P S W

		1	2	3	4	5	6	7	8
Pulse -> Price	1 P	OFF	OFF	OFF					
	2 P	ON	OFF	OFF					
	5 P	OFF	ON	OFF					
	10 P	ON	ON	OFF					
	20 P	OFF	OFF	ON					
	50 P	ON	OFF	ON					
	100 P	OFF	ON	ON					
	200 P	ON	ON	ON					
					OFF				
					ON				
Pulse -> Price	1 P					OFF	OFF	OFF	
	5 P					ON	OFF	OFF	
	10 P					OFF	ON	OFF	
	50 P					ON	ON	OFF	
	100 P					OFF	OFF	ON	
	200 P					ON	OFF	ON	
	500 P					OFF	ON	ON	
	1000P					ON	ON	ON	
									OFF
									ON

Operation

- 1. If the card dispenser runs out the telephone card, the corresponding display shows nothing.**
- 2. When all dispensers are "empty" of card, the coin selector will not take coins.**
- 3. To select a card, please press the Key1/Key2/Key3/Key4 (on JP11).**

Card price setting

- 1. There are 4 keys for card price setting: K1, K2, K3 and K4 (single key on upper right corner).**

Key "K1" -> "Selection" / "Cancel"

Key "K2" -> "+"

Key "K3" -> "-"

Key "K4" -> "Enter"

- 2. Press K1 will get into the price setting mode.**
- 3. Press K1 one by one will show the next card price.**
- 4. Press K2 to increase the card price.**
- 5. Press K3 to decrease the card price.**
- 6. When price change, the display will flush quickly.**
- 7. Then press K4 will confirm the new price.**
- 8. At the quickly flush state, press K1 can cancel the new price.**
- 9. At the slow flush state, press K4 will get out the "price setting" mode.**