SG048

```
JP1 (for Future)
  4 3 2 1
JP2
       To Coin Selector
           i
  5 4 3 2 1
  Inh x GND Coin +12V
          (NO)
JP3 (for Future)
  6 5 4 3 2 1
JP4
          Push button
  5 4 3 2 1
  K4 K3 K2 K1 GND
(The same as Keyboard "K1", "K2", "K3", "K4")
JP9 Power1
  3 2 1
+12V +5V GND
```

use	J I JP10)	P 1	0	Powe	er2 ((Eith	ner P	ower'	1 or	Powe	er2 but	suggest	you	use	JP9 a	and don't
	7	7		5	4	3	2	1								
	+1	2 V		SSR	GND	GND	+5 V	+ 5V								
	J [P 1	1		Card	d Se	lect	ion								
	1	0	9	8	7	6	5	4	3	2	1					
						0	۱۸۰	-101	ıo	LOND	OND					
								dCard		1 GND	GND					
						4	3	2	1							
	JI	P 1	2	(fo	or Fu	uture	e)									
	7	7	6	5	4	3	2	1								
							+12\	/+12V	, 							
	JI	P 1	3		Cour	nter	out	out								
	7	7	6	5	4	3	2	1								
	Tota	ı I C	ard	Card	dCar	dCar	d +12	2V + 12	·V							
					2											
	۰	P 5			۰	ard 4	dien	oneor	 1							
			Л		Uč	alu (a i spe	enser	ı							
	JI	P 1	4													
	į	5	4	3	2	1										

·	J F			_	Ca	rd dispenser 2
	5	; ;	4	3	2	1
	J F			- 	Ca	rd dispenser 3
	5	5	4	3	2	1
	J F				Ca	rd dispenser 4
	====	-==	4	3	2	1 ====================================